
5.3 INSTRUCTION FOR FAULT FINDING

5.3.1 COMBUSTION STARTS IMMEDIATELY WHEN HEATER IS SWITCHED ON

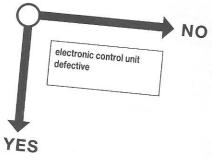

5.3.2 HEATER DOES NOT START WHEN SWITCHED ON

