


5.3.4 HEATER STARTS ONLY AFTER SEVERAL STARTING ATTEMPTS

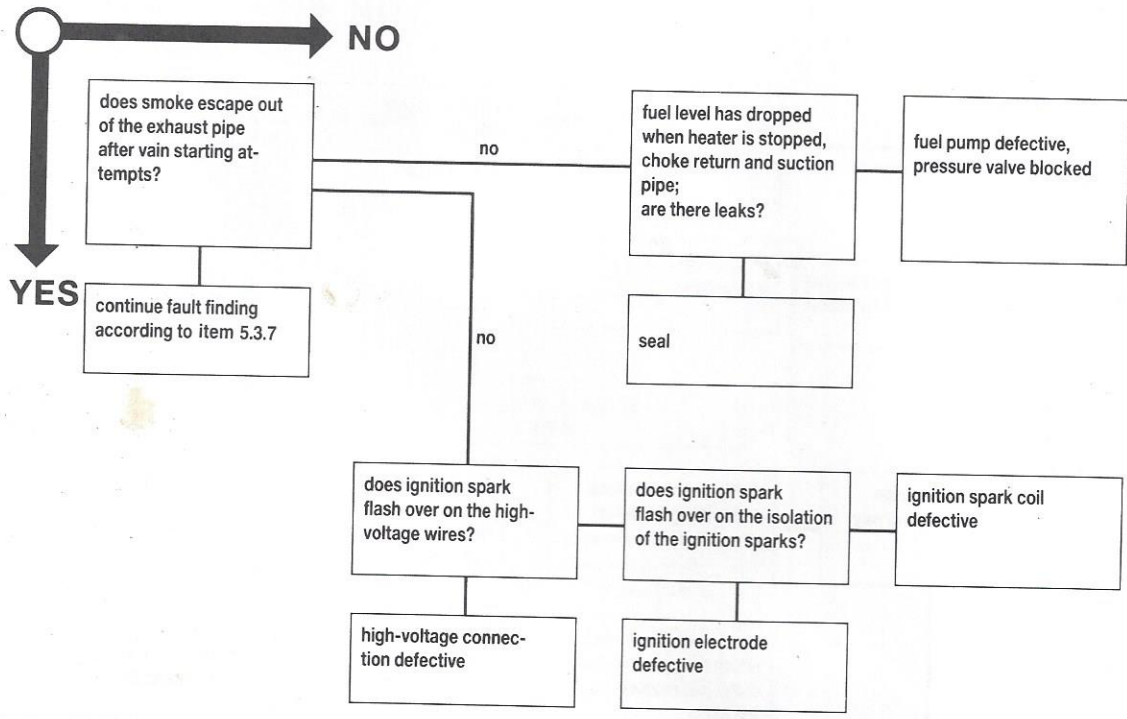

5.3.5 HEATER SWITCHES OFF BY ITSELF DURING OPERATION

