



- FUSE/BREAKER CIRCUITS**
- SK1 - LEVEL WARNING SW RELAY ON PAT
  - SK2 - HEADLGT. ALERT
  - SK3 - RH V/S WIPER
  - SK4 - LH V/S WIPER
  - SK5 - DRIVING LST. ELEC. VALVE
  - SK6 - PARKING DETECTOR
  - SK7 - RH FRT. HEAT
  - SK8 - LH FRT. HEAT
  - SK9 - DEFROST
  - SK10 - HEAT MODULATOR
  - SK11 - HEAT RAMP
  - SK12 - RH BATT. ENABLE
  - SK13 - ELEC. MASTER SV (FILTERED)
  - SK14 - BUNNELLER ALARM
  - SK15 - STEP SYSTEM
  - SK16 - CELLULAR PHONE MEMORY
  - SK17 - SPARE
  - SK18 - SPARE
  - SK19 - SPARE
  - SK20 - SPARE
  - SK21 - SPARE
  - SK22 - SPARE
  - SK23 - O.S. COMP. LSTS
  - SK24 - REAR VIEW CAMERA
  - SK25 - ELEC. SEAT LFT
  - SK26 - SPARE
  - SK27 - SPARE
  - SK28 - PILOT FLUD. LST.
  - SK29 - OODS LST.
  - SK30 - OODS LST. 2VDC/AIR VENTS
  - SK31 - LEVELING JACKS
  - SK32 - O.S. MIRROR REMOTE CTRL.
  - SK33 - O.S. MIRROR HEAT
  - SK34 - AUX AIR COMPRESSOR RELAY
  - SK35 - DRIVING LST.
  - SK36 - CLEARANCE LIGHTS
  - SK37 - POWER WIP. FRT. SPR.
  - SK38 - HEADLIGHTS
  - SK39 - SUSP. DUMP AIR VALVE
  - SK40 - TRG DUMP AIR VALVE
  - SK41 - SENSOR ACTUATOR
  - SK42 - STEP LSTS.
  - SK43 - SPARE
  - SK44 - SPARE
  - SK45 - SPARE
  - SK46 - C.B. REMO'D MEMORY
  - SK47 - CASSETTE & CD PLAYER MEMORY
  - SK48 - SPARE
  - SK49 - SPARE
  - SK50 - SPARE
  - SK51 - SPARE
  - SK52 - STEP SYSTEM ENABLE RELAY
  - SK53 - CELLULAR PHONE SW
  - SK54 - COMPARTMENT LOCKS
  - SK55 - SPARE
  - SK56 - CD RADIO
  - SK57 - MISC. HORN
  - SK58 - V/S WIPER COLUMN PWR.
  - SK59 - TUNER/CASSETTE
  - SK60 - BEDROOM STEREO
  - SK61 - EQUALIZER
  - SK62 - PARKING LST.
  - SK63 - STOP LSTS.
  - SK64 - HORN
  - SK65 - HORN
  - SK66 - REAR DIRECTIONAL LSTS.
  - SK67 - FLASHER
  - SK68 - DIRECTIONAL LSTS.
  - SK69 - SW. 24-TER
  - SK70 - SPARE
  - SK71 - SPARE
  - SK72 - LTRTY CHPT. LST. R/T SYSTEM
  - SK73 - PARKING LST.
  - SK74 - STOP LSTS.
  - SK75 - HORN
  - SK76 - HORN
  - SK77 - REAR DIRECTIONAL LSTS.
  - SK78 - FLASHER
  - SK79 - DIRECTIONAL LSTS.
  - SK80 - SW. 24-TER
  - SK81 - SPARE
  - SK82 - SPARE
  - SK83 - LTRTY CHPT. LST. R/T SYSTEM
  - SK84 - HIGH IDLE/PARKING BRAKE PRESS. SW.
  - SK85 - COOLANT LEVEL MOD.
  - SK86 - NEUTRAL SAFETY RELAY
  - SK87 - RETARDER LST. STOP LST. SW.
  - SK88 - RETARDER STOP LSTS.
  - SK89 - RETARDER RELAY
  - SK90 - SUSP. DUMP RELAY
  - SK91 - LHM DASH SWITCH
  - SK92 - LOW AIR BUZZER
  - SK93 - QUICK START
  - SK94 - RACQD. FILTER
  - SK95 - CHARGE FAN
  - SK96 - LEVELING JACK IGN/STEP IGN TRIGGER
  - SK97 - LHM DASH KNITON
  - SK98 - RAB DATER
  - SK99 - DIRECTIONAL LSTS. COLUMN SW.
  - SK100 - SHIFTER PANEL. IGN/DASH LSTS.

- RELAY CIRCUITS**
- K1 - RH V/S WIPER L.O.
  - K2 - LH V/S WIPER L.O.
  - K3 - RH V/S WIPER HI
  - K4 - LH V/S WIPER HI
  - K5 - DRIVING LST. SAMPLE
  - K6 - CLEARANCE LST. SAMPLE
  - K7 - HEADLGT. ALERT
  - K8 - RH BATT. SOLINOID
  - K9 - RH BATT. SOLINOID
  - K10 - ENT. DOOR LOCK
  - K11 - ENT. DOOR LOCK
  - K12 - BLE. FAULT LST. TIME DELAY RELAY
  - K13 - ENT. STEP SYSTEM
  - K14 - ENT. STEP SYSTEM
  - K15 - RH GLE
  - K16 - BRAKE SW.
  - K17 - RETARDER STOP L.T.
  - K18 - ECU
  - K19 - CHECK TRNS.
  - K20 - CHECK TRNS.
  - K21 - CHECK TRNS.
  - K22 - BRAKE INTRATED RETARDER (ENABLE)
  - K23 - RETARDER
  - K24 - NEUTRAL SAFETY
  - K25 - ELEC. HORN
  - K26 - DIRECTIONAL CTRL.
  - K27 - DIRECTIONAL CTRL.
  - K28 - DIRECTIONAL CTRL.
  - K29 - DIRECTIONAL CTRL.
  - K30 - DIRECTIONAL CTRL.
  - K31 - DIRECTIONAL CTRL.
  - K32 - DIRECTIONAL CTRL.
  - K33 - HEAD LST. HI SEW
  - K34 - HEAD LST. LO SEW
  - K35 - SW/FLTR
  - K36 - SUSP. DUMP TIME DELAY
  - K37 - SUSP. DUMP TIME DELAY
  - K38 - SUSP. DUMP TIME DELAY
  - K39 - SUSP. DUMP TIME DELAY
  - K40 - SUSP. DUMP TIME DELAY
  - K41 - PARK LIGHTS RELAY
  - K42 - STOP ENG CHRS A/C
  - K43 - STOP ENG CHRS A/C
  - K44 - RETARDER NO LST.

- TERMINAL STRIP CIRCUITS**
- 1 - ECU ODDDS
  - 2 - ECU ODDDS
  - 3 - ECU ODDDS
  - 4 - ECU ODDDS
  - 5 - ECU ODDDS
  - 6 - ECU ODDDS
  - 7 - ECU ODDDS
  - 8 - ECU ODDDS
  - 9 - ECU ODDDS
  - 10 - ECU ODDDS
  - 11 - ECU ODDDS
  - 12 - ECU ODDDS
  - 13 - ECU ODDDS
  - 14 - ECU ODDDS
  - 15 - ECU ODDDS
  - 16 - ECU ODDDS
  - 17 - ECU ODDDS
  - 18 - ECU ODDDS
  - 19 - ECU ODDDS
  - 20 - ECU ODDDS
  - 21 - ECU ODDDS
  - 22 - ECU ODDDS
  - 23 - ECU ODDDS
  - 24 - ECU ODDDS
  - 25 - ECU ODDDS
  - 26 - ECU ODDDS
  - 27 - ECU ODDDS
  - 28 - ECU ODDDS
  - 29 - ECU ODDDS
  - 30 - ECU ODDDS
  - 31 - ECU ODDDS
  - 32 - ECU ODDDS
  - 33 - ECU ODDDS
  - 34 - ECU ODDDS
  - 35 - ECU ODDDS
  - 36 - ECU ODDDS
  - 37 - ECU ODDDS
  - 38 - ECU ODDDS
  - 39 - ECU ODDDS
  - 40 - ECU ODDDS
  - 41 - ECU ODDDS
  - 42 - ECU ODDDS
  - 43 - ECU ODDDS
  - 44 - ECU ODDDS
  - 45 - ECU ODDDS
  - 46 - ECU ODDDS
  - 47 - ECU ODDDS
  - 48 - ECU ODDDS
  - 49 - ECU ODDDS
  - 50 - ECU ODDDS
  - 51 - ECU ODDDS
  - 52 - ECU ODDDS
  - 53 - ECU ODDDS
  - 54 - ECU ODDDS
  - 55 - ECU ODDDS
  - 56 - ECU ODDDS
  - 57 - ECU ODDDS
  - 58 - ECU ODDDS
  - 59 - ECU ODDDS
  - 60 - ECU ODDDS
  - 61 - ECU ODDDS
  - 62 - ECU ODDDS
  - 63 - ECU ODDDS
  - 64 - ECU ODDDS
  - 65 - ECU ODDDS
  - 66 - ECU ODDDS
  - 67 - ECU ODDDS
  - 68 - ECU ODDDS
  - 69 - ECU ODDDS
  - 70 - ECU ODDDS
  - 71 - ECU ODDDS
  - 72 - ECU ODDDS
  - 73 - ECU ODDDS
  - 74 - ECU ODDDS
  - 75 - ECU ODDDS
  - 76 - ECU ODDDS
  - 77 - ECU ODDDS
  - 78 - ECU ODDDS
  - 79 - ECU ODDDS
  - 80 - ECU ODDDS
  - 81 - ECU ODDDS
  - 82 - ECU ODDDS
  - 83 - ECU ODDDS
  - 84 - ECU ODDDS
  - 85 - ECU ODDDS
  - 86 - ECU ODDDS
  - 87 - ECU ODDDS
  - 88 - ECU ODDDS
  - 89 - ECU ODDDS
  - 90 - ECU ODDDS
  - 91 - ECU ODDDS
  - 92 - ECU ODDDS
  - 93 - ECU ODDDS
  - 94 - ECU ODDDS
  - 95 - ECU ODDDS
  - 96 - ECU ODDDS
  - 97 - ECU ODDDS
  - 98 - ECU ODDDS
  - 99 - ECU ODDDS
  - 100 - ECU ODDDS

**NOTES**

1) DIMENSIONS 02-013 ARE 3-RIP DIMENSIONS

2) SEE P/N 804637 SIZE "C" FOR COMPONENT USAGE CHART

Blue Bird Wonder Lodge  
 1993 KLWB  
 6076437

ACTIVATES NOS	6023594
REPLACES NOS	
LET	
REVISIONS	
DR. APP. OK. ECU DATE	