


Relay Detail

NOTES:

1. Ground shields to chassis.
2. Do not cut into wires when trimming insulation off.

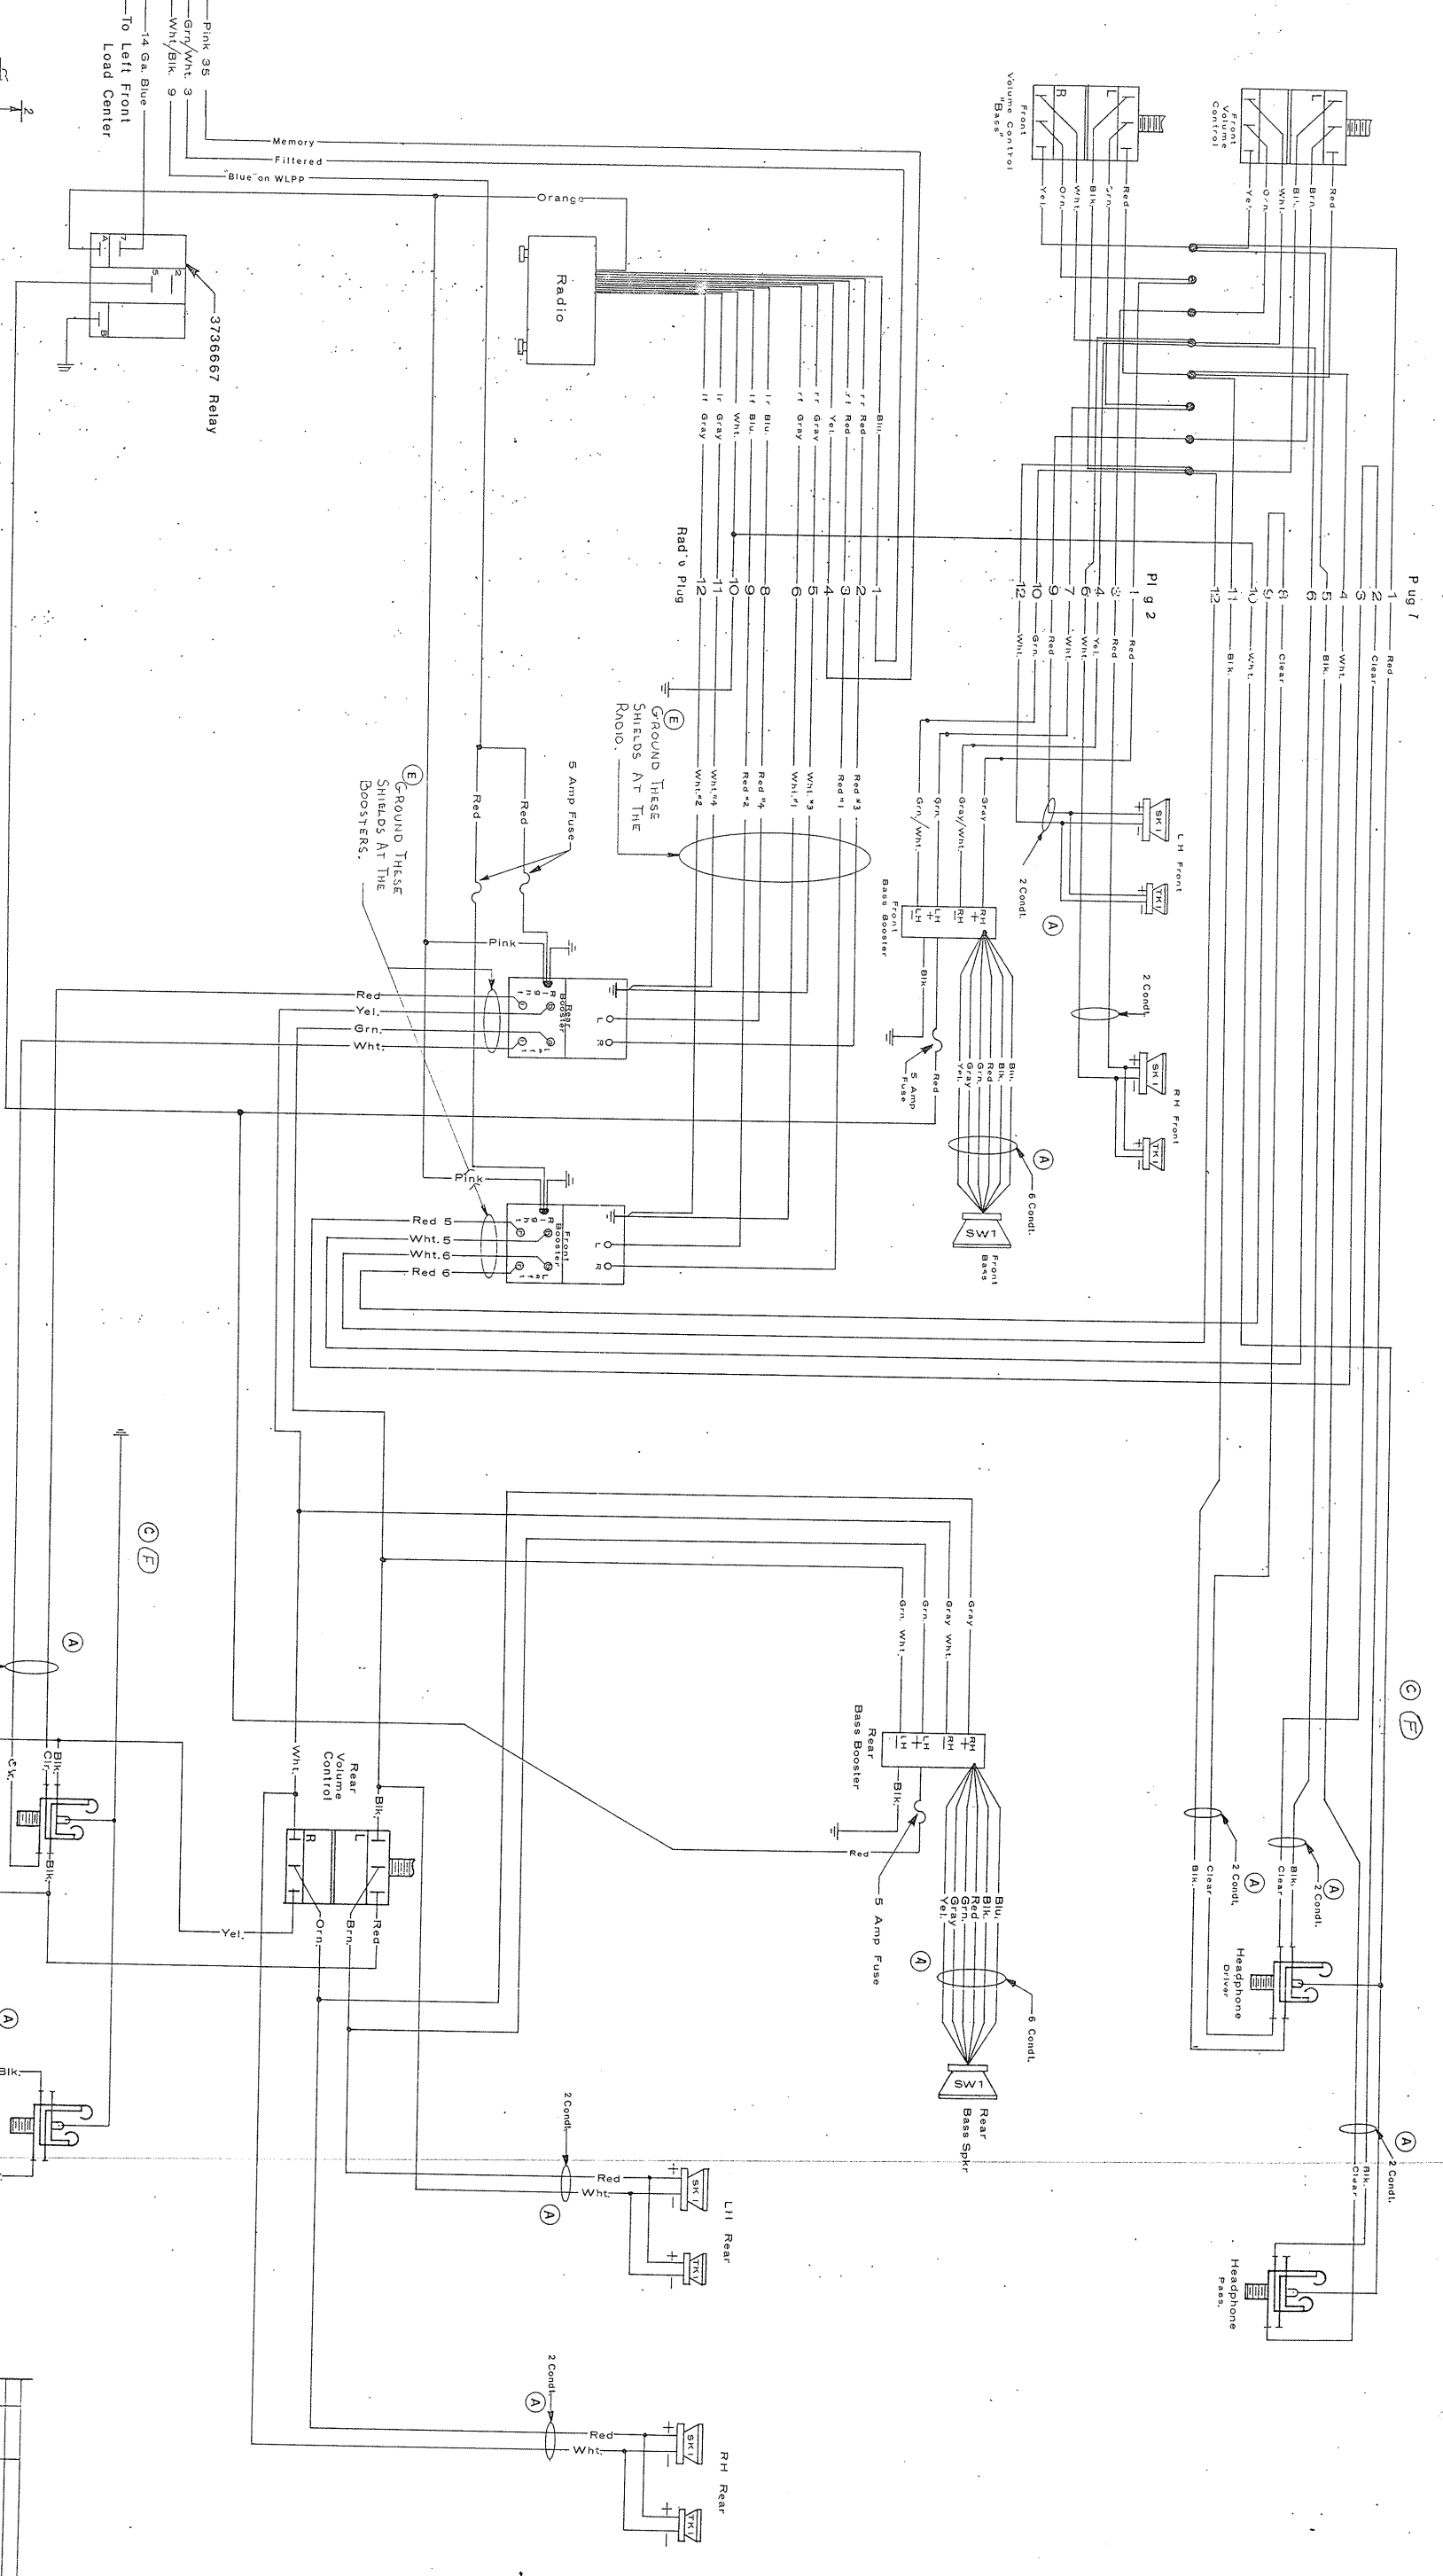

REV.	DATE	BY	REVISIONS
F	7-14-82		Eliminate 125Ω Resistors
E	7-14-82		Control Ground Location
D	3-27-82		Deleted Control Grounds
C	3-27-82		Added 125 Ω Resistors
B	1-20-81		Added Notes
A	CS 1-20-81		Added Control Grounds
LET	CS 1-20-82		
WAS			

Blue Bird Venderlogge, Inc.
 FORT VALLEY, GEORGIA, U.S.A.

Diagram Wiring Radio Boosters & Sockets WLEC WLPD
 Tech. Info. by D. Robinson

TOLERANCE ON ALL DIMENSIONS IS PLUS OR MINUS UNLESS OTHERWISE SPECIFIED.

INACTIVE/TER NOS.